



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying cleaner/primer to mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM CARRIER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant to the cam carrier surface of the cylinder head.

Wipe off any excess sealant.

- Continued -

### CAMSHAFT SEALS

**IMPORTANT:** There are two similar seals included in this set. Install the seal marked **FRONT** to the timing belt end of the camshaft. Install the seal marked **REAR** to the rear of the camshaft.

**PRIOR TO INSTALLING THE SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

---

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

---

© 2007 Federal-Mogul Corporation  
Form No. I-1251 (Rev. 3/07)

Printed in U.S.A.



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying cleaner/primer to mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM CARRIER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant to the cam carrier surface of the cylinder head.

Wipe off any excess sealant.

- Continued -

### CAMSHAFT SEALS

**IMPORTANT:** There are two similar seals included in this set. Install the seal marked **FRONT** to the timing belt end of the camshaft. Install the seal marked **REAR** to the rear of the camshaft.

**PRIOR TO INSTALLING THE SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

---

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

---

© 2007 Federal-Mogul Corporation  
Form No. I-1251 (Rev. 3/07)

Printed in U.S.A.



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying cleaner/primer to mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM CARRIER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant to the cam carrier surface of the cylinder head.

Wipe off any excess sealant.

- Continued -

### CAMSHAFT SEALS

**IMPORTANT:** There are two similar seals included in this set. Install the seal marked **FRONT** to the timing belt end of the camshaft. Install the seal marked **REAR** to the rear of the camshaft.

**PRIOR TO INSTALLING THE SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

---

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

---

© 2007 Federal-Mogul Corporation  
Form No. I-1251 (Rev. 3/07)

Printed in U.S.A.



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying cleaner/primer to mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM CARRIER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant to the cam carrier surface of the cylinder head.

Wipe off any excess sealant.

- Continued -

### CAMSHAFT SEALS

**IMPORTANT:** There are two similar seals included in this set. Install the seal marked **FRONT** to the timing belt end of the camshaft. Install the seal marked **REAR** to the rear of the camshaft.

**PRIOR TO INSTALLING THE SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

---

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

---

© 2007 Federal-Mogul Corporation  
Form No. I-1251 (Rev. 3/07)

Printed in U.S.A.



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying cleaner/primer to mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM CARRIER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant to the cam carrier surface of the cylinder head.

Wipe off any excess sealant.

- Continued -

### CAMSHAFT SEALS

**IMPORTANT:** There are two similar seals included in this set. Install the seal marked **FRONT** to the timing belt end of the camshaft. Install the seal marked **REAR** to the rear of the camshaft.

**PRIOR TO INSTALLING THE SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

---

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

---

© 2007 Federal-Mogul Corporation  
Form No. I-1251 (Rev. 3/07)

Printed in U.S.A.



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying cleaner/primer to mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM CARRIER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant to the cam carrier surface of the cylinder head.

Wipe off any excess sealant.

- Continued -

### CAMSHAFT SEALS

**IMPORTANT:** There are two similar seals included in this set. Install the seal marked **FRONT** to the timing belt end of the camshaft. Install the seal marked **REAR** to the rear of the camshaft.

**PRIOR TO INSTALLING THE SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

---

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

---

© 2007 Federal-Mogul Corporation  
Form No. I-1251 (Rev. 3/07)

Printed in U.S.A.



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying cleaner/primer to mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM CARRIER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant to the cam carrier surface of the cylinder head.

Wipe off any excess sealant.

- Continued -

### CAMSHAFT SEALS

**IMPORTANT:** There are two similar seals included in this set. Install the seal marked **FRONT** to the timing belt end of the camshaft. Install the seal marked **REAR** to the rear of the camshaft.

**PRIOR TO INSTALLING THE SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

---

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

---

© 2007 Federal-Mogul Corporation  
Form No. I-1251 (Rev. 3/07)

Printed in U.S.A.



## FEL-PRO INSTALLATION TIPS

### CAM TOWER

#### CLEAN MATING SURFACES.

**PREPARE MATING SURFACES**, for application of anaerobic sealant, by applying cleaner/primer to mating surface.

Allow 1 to 2 minutes to dry.

**SEAL CAM CARRIER MATING SURFACE.** Apply a thin continuous bead of anaerobic sealant to the cam carrier surface of the cylinder head.

Wipe off any excess sealant.

- Continued -

### CAMSHAFT SEALS

**IMPORTANT:** There are two similar seals included in this set. Install the seal marked **FRONT** to the timing belt end of the camshaft. Install the seal marked **REAR** to the rear of the camshaft.

**PRIOR TO INSTALLING THE SEAL** apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

---

**IMPORTANT:** Do not install any seal without break-in lubricant protection.

---

© 2007 Federal-Mogul Corporation  
Form No. I-1251 (Rev. 3/07)

Printed in U.S.A.