

67034


Bearing Race and Seal Driver Set

Used to install most standard wheel bearing races and seals.

INSTRUCTIONS:

ALWAYS WEAR SAFETY GLASSES.

1. After removing the wheel bearing seal, check for damage before installing the new seal.
2. Match the driver, **(B)** through **(J)** that is the closest to the diameter of the seal.
3. Assemble driver with handle **(A)**.
4. Using a mallet, gently tap the new seal in place.
5. If wheel bearing is going to be replaced, remove old race.
6. Match the tapered driver with the new bearing race.
7. Line up the new race to the housing keeping it straight in line.
8. Using the race installer (driver & handle) and mallet, gently tap race into housing.

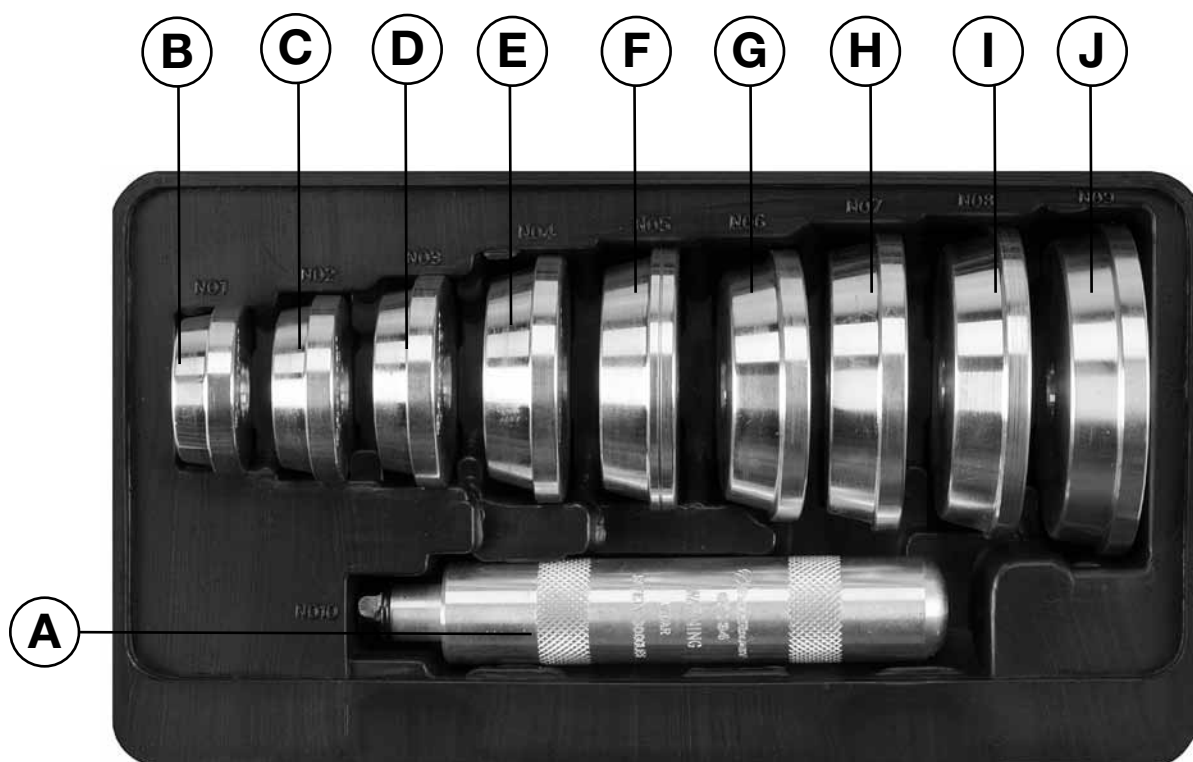

A. Handle
B. 1.565
C. 1.750
D. 1.965
E. 2.325

F. 2.470
G. 2.555
H. 2.830
I. 2.995
J. 3.180

All instructions and illustrations are general and are NOT INTENDED TO BE VEHICLE SPECIFIC.
EverTough recommends that you consult the manufacturer's service manual for your vehicle before any test or repair procedures are performed.



1-877-TUFF123